



## NANO T-L COMPUTER CONTROLLER FEATURES

- PPT-BASIC
- PPT-BASIC as EDGE CONTROLLER
- PPC III & PPT-PRO



## Monitor

DIRECTION	SAFETY	START REASON
SPEED	PANEL POWER	WILL START
ENDGUN	RUNNING	START BEARING
ENDGUN MODE	WATER PRESSURE STATUS	AUTO-RESTART
*/**ENDGUN 2	WATER PUMP STATUS	AUTO-REVERSE
*/**ENDGUN 2 MODE	GPS POSITION(USING T-L POSITIONING)	***PSI (MAIN PANEL)
SAFETY	DIRECTION	**PSI (END TOWER)
POWER	LAST START E2E1E1	*/***FLOW
***AUX	LAST STOP	**/**FAULT MSGS PRESSURE
***AUX MODE	GPS STALL	WAIT NOTIFICATION PADS
*WAIT STATE	COLLISION	METERS
HOURL METERS	STOP REASON	

## Control

START	TASK SCHEDULE	
STOP	**AUTO-REVERSE	
DIRECTION APPLICATION	AUTO-STOP	
RATE/SPEED ENDGUN	AUTO-RESTART WATER	*PPT BASIC/PPC III ONLY
ENDGUN2	PUMP CONTROL	** EDGE CONTROLLER
STOP PAD	WET/DRY KILL	*** PPT-PRO ONLY